

Digital thermometer and hygrometer INDOOR

Thank you for choosing an Airbi product.

BEFORE USE

- Please read the following information very carefully.
- This manual will help you get to know the new device, all its functions, parts and advise you in case of problems with the device.
- Carefully reading and following the instructions contained in this manual will prevent damage or destruction of the device.
- We are not responsible for any damage to the device caused by not following the instructions contained in this manual.
- Pay close attention to the safety instructions.
- Keep the manual for future reference.

PACKAGE CONTENTS

- Thermometer and hygrometer
- Instructions for use


FIELDS OF APPLICATION

- The device is used to control the internal temperature and humidity for a healthy environment
- Memory for maximum and minimum values
- Time and date display
- Alarm clock function
- Hourly chime sound
- To stand or hang

SAFETY INSTRUCTIONS


- The device should only be used as described in the manual.
- Any unauthorized repairs, modifications or other changes to the device are prohibited.
- The device is not intended for medical purposes or public use, but exclusively for domestic use.
- Keep the device and batteries out of the reach of children.
- Do not throw batteries into fire, disassemble or recharge them.
- Replace weak batteries immediately to avoid damage to the device due to battery leakage. If your battery leaks, use protective gloves and goggles when handling it.
- Do not expose the device to extreme temperatures, vibrations and shocks.

DESCRIPTION

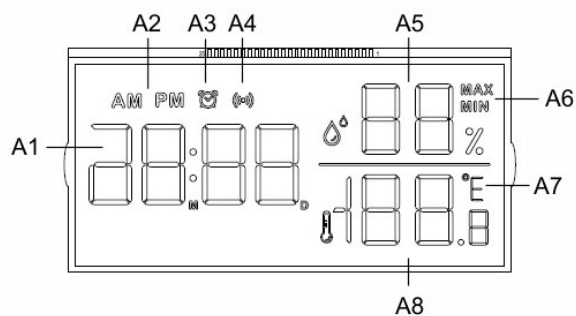

A: Display

- A1: Time/alarm time/date
- A2: AM/PM with 12h display
- A3: Alarm clock symbol
- A4: Hourly chime sound symbol
- A5: Relative humidity in %
- A6: Display indication of MAX/MIN values
- A7: Temperature unit °C/°F
- A8: Air temperature

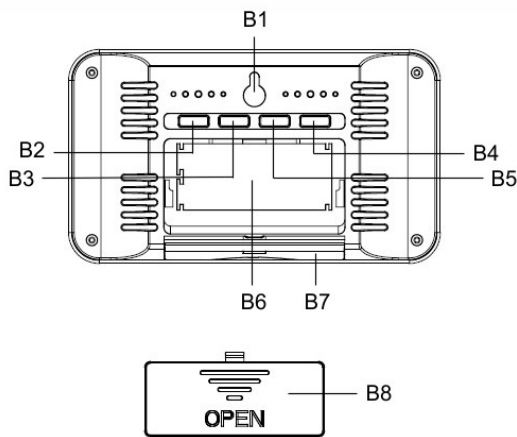**B: Back side****B1:** Hanging hole**B2:** MODE button**B3:** UP button**B4:** MAX/MIN button**B5:** °C/°F button**B6:** Battery compartment**B7:** Flip-out stand**B8:** Battery compartment cover**GETTING STARTED**

- Open the battery compartment and insert one new AAA alkaline battery.
- Close the battery compartment again.
- All segments of the display will be displayed for a short time.
- The device is ready for use.
- The temperature and humidity will be shown on the display.

MODE SELECTION

- In normal display mode, you can use the MODE button to select between time display modes and alarm mode.
- When the time mode is displayed, the colon separating the hours and minutes will flash, in the alarm mode, the colon will be permanently displayed on the display.

MAX/MIN VALUES

- Pressing the MAX/MIN button displays the maximum measured values since the last reset.
- Press the MAX/MIN button again to display the minimum measured values since the last reset.
- By pressing the MAX/MIN button again, the display switches to displaying the current temperature and humidity values.
- If you want to reset the minimum and maximum values, then it is necessary to hold the MAX/MIN button for 2-3 seconds.

TEMPERATURE UNIT SETTING

- Press the °C/°F button to set the temperature unit (Celsius or Fahrenheit).

SETTING THE CLOCK AND CALENDAR

- Press and hold the MODE button.
- The minutes are flashing, you can set them with the UP button.
- With each further short press of the MODE button, the hour, time display format (12/24 hour), year, month and day will gradually flash, which you can gradually set to the desired value with the UP button.
- Press the MODE button for the last time to confirm everything and the time will appear on the display.

ALARM CLOCK SETTINGS

- Briefly press the MODE button in the time display. 12:00 (default) or the last set alarm time will be displayed.
- Hold the MODE button to enter the setting mode.
- The alarm icon will appear on the display and the minutes will flash, press the UP button to set them.
- Confirm by pressing the MODE button and the hour starts flashing, set it with the UP button.
- Press MODE to confirm the setting. The wake-up time and the alarm symbol are shown on the display. The alarm clock is activated.
- Press MODE to return to the time display.
- When the alarm clock rings, press any button to stop it. If you do not press any button, the alarm will stop after one minute. The wake-up time will remain active.

ACTIVATION/DEACTIVATION OF THE ALARM AND CLOCK SIGNAL

- Press the MODE button in the time display and the set alarm time will be displayed instead of the current time.
- Press the UP button once to activate the set alarm clock. The alarm clock symbol (bell) will appear on the display.
- Press the UP button again to activate the clock signal. The corresponding symbol appears on the display.
- The third press of the UP button activates both functions. Both symbols are shown on the display.
- The fourth press of the UP button deactivates both functions. The symbols disappear.
- Press the MODE button to return to normal mode.

DATE DISPLAY

- By pressing the UP button when the current time is displayed, the date will be briefly displayed instead of the time.

PLACEMENT AND ATTACHMENT

- The device can be placed on a mat using the folding stand or you can hang it on the wall using the hole on the back of the device.

CARE AND MAINTENANCE

- Clean the device with a soft damp cloth. Do not use cleaning agents.
- Remove the battery if you are not going to use the device for a long time.
- Store the device in a dry place.

BATTERY REPLACEMENT

- Replace the battery when the display starts to dim.
- Open the battery compartment, remove the old one and insert a new AAA battery with the correct polarity.
- Close the battery compartment.

PROBLEM SOLVING

No data is shown on the display:

- Make sure the battery is installed correctly
- Replace the battery

Incorrect data on the display:

- Replace the battery

If the device still does not work properly, please contact the seller of the product.

WASTE DISPOSAL



The product was made from premium materials and components that can be recycled and reused.

Never dispose of empty batteries and rechargeable batteries in household waste.



As a consumer, you are responsible for taking them to an electrical shop or local waste collection point in accordance with your applicable legislation. You protect the environment by doing so.

The symbols of the heavy metals contained are as follows: Cd = Cadmium, Hg = Mercury, Pb = Lead

This device is marked with the European Waste Electrical and Electronic Equipment (WEEE) label.

Please do not dispose of this device in household waste. The user is obliged to take the end-of-life device to the appropriate collection point for electrical waste to ensure that it is processed in accordance with the environment.

SPECIFICATIONS

Power supply:	Alkaline battery 1 x AAA (not included in the product)
Measured temperature range:	0°C...+50°C
Temperature measurement accuracy:	+/- 1°C
Measured humidity range:	20...95 % rH
Humidity measurement accuracy:	+/- 5%
Dimensions:	118 x 22 x 68 mm
Weight:	72 g (without battery)

Manufacturer: Bibetus, s.r.o., Loosova 1, Brno 638 00

No part of this manual may be published without the written consent of the manufacturer. Technical data are valid as of the date this manual was printed and are subject to change without prior notice. The latest technical data and product information can be found on our website.

www.airbi.eu

10/2022